



Brush Replacement

1. Turn your Club & Ball Washer upside down and remove the 7 screws holding the lid to the case.
2. Remove lid from case to expose the brushes
3. Slide Club side brushes out and replace with the long bristle brush, making sure that the notched edge is down and the groove in the bottom of the Club & Ball Washer.
4. Slide ball side brushes out and replace with short bristle brushes, bending them into a "U" shape allowing them to slide into the curved opening, notched side down.

Assembly

1. Now, making sure the gaskets are held into place on the lid, and the brushes are installed in the case, place the lid onto the case. Make sure the top of the brush backs are between the and the four longer pins on the lid; this will ensure that the brushes remain in proper alignment.
2. Now, turn the Club & Ball Washer unit upside down, allowing the ball retainer to hang off the edge of a table or flat surface. Replace the 7 screws that attach the lid to the case, making sure NOT to over tighten the screws.



Club & Ball Washer, Inc.
2907 29th Ave. E.
Bradenton, FL. 34208

Ph. (941)746-2927
Fax. (941)746-8451